



16030 – 118 Ave, Edmonton, AB T5V 1C6 Phone (780) 453-5950 Fax (780) 452-3470 Email: sales@albertairrigation.com

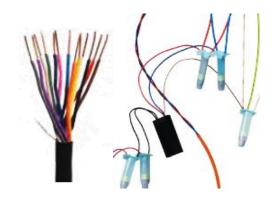

How To Wire The Electric Controller

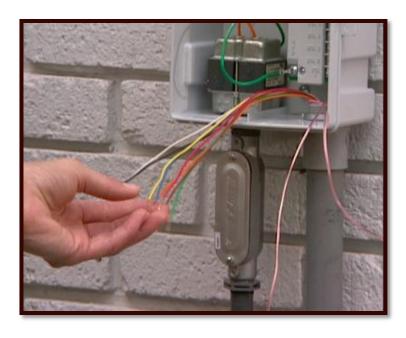

STEP 1: GET A FUSE BOX

Before beginning the installation, hire a licensed electrician to install a separate fuse box on the exterior of the home. This box will be used exclusively for the controller.

STEP 2: STRIP THE WIRES

The control wire that was pulled underground from our master control valve is threaded through the conduit attached to the house. Start by stripping each wire's insulation to reveal the colored wires again. Mount the control box to the side of the house. Before wiring the control box, make sure all power is turned off.

STEP 3: COMPLETE THE WIRING

Start by stripping each wire's insulation about 1/2 inch from each end. Then, loosen the contact screw labeled "common" and attach the common wire (white) to the contact (Image 1). Next, take the brown wire (Zone 1) and screw it onto the contact labeled Zone 1. Do the same thing for the remaining 3 zones (Image 2). To test the system, manually turn on each zone to check that there is sufficient water pressure and that there are no leaks and that each sprinkler head is working.



